


## Ceramic Band Fitting



Move end link onto the inlay end

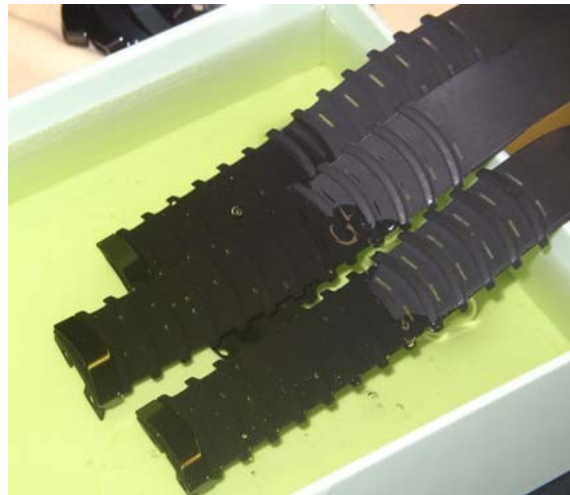

Soak the inlay in soapy water  
(0,5ml washing-up liquid/ 250 ml water)



Fit ceramic links (as many as needed)  
onto the inlay, but from the smooth  
backside



Paint the inlay with silicone oil and  
pull the links to their end position



This is how a finished band half looks


## Ceramic Band Fitting




Here you see the second piece of your inlay



Please use a pair of pliers to pull the whole inlay through the links until it stops

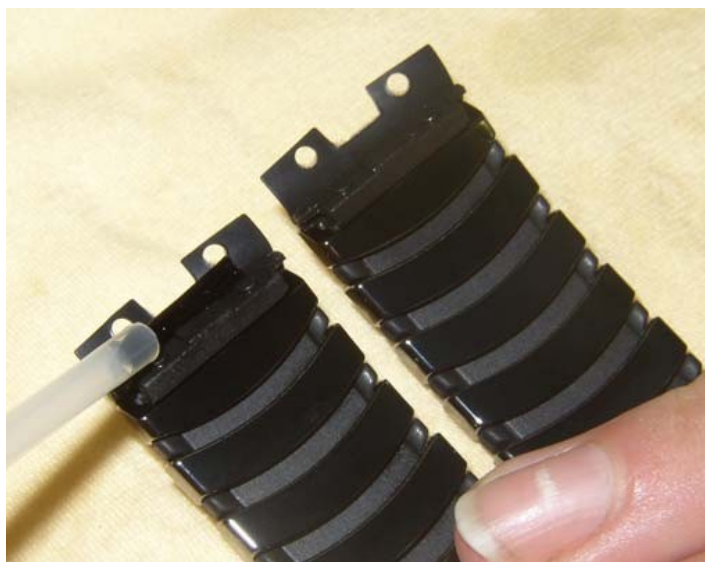

Moisten the silicone end with primer (Loctite 770)

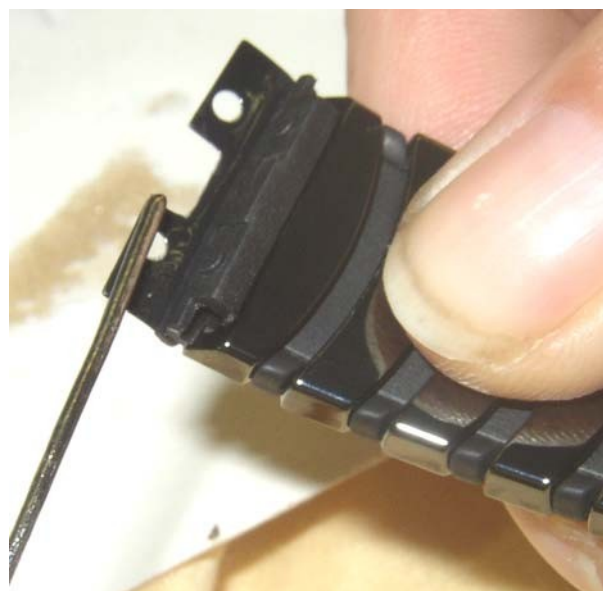

Coat the upper silicone flap/end with superglue (Loctite 406)

## Ceramic Band Fitting



Fold the silicone flap/end onto the PU-part and press it together



Holes on the silicon inlay and the PU-strap have to be parallel (as marked/indicated)

## Ceramic Band Fitting



Cut away the overlapping parts of the PU-strap; along the curve as shown




Mount the clasp to the inlay; make sure it hooks into the holes (take care that the silicone inlay doesn't get damaged)

## Ceramic Band Fitting



Fold the clasp and fix it with a spring bar

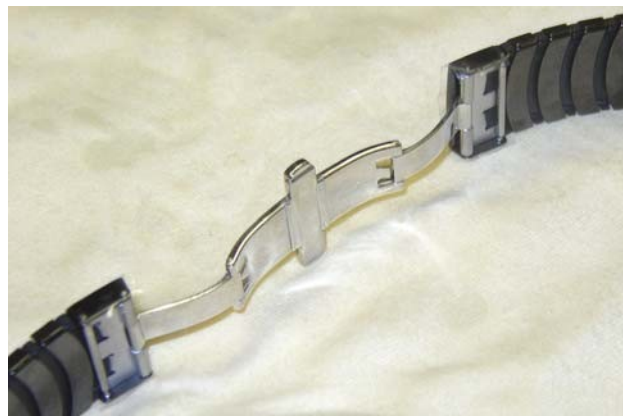

Do the same with the other band half

Clean the band,  
so that no finger prints are visible